

Provape-1 User's Manual



Thank you for purchasing a Provape-1 Electronic Cigarette!

Please read this manual before using your e-cigarette.

www.provape.com

Your Provape-1 has several components:

The Tip inserts into the Atomizer.

If the Tip comes with a small cover cap, remove the cap before inserting it into the Atomizer. The Tip includes a small fluid reservoir.

The Atomizer screws onto the Front Cap.

Make sure you load either the Atomizer or the Tip reservoir with your fluid of choice before attempting to use the Provape-1. Two or three drops is usually plenty.


The Front Cap threads onto the Tube.

Be careful to avoid cross-threading the Front Cap into the Tube. Don't over-tighten.

The Button activates the Atomizer, which creates vapor.

The End Cap is where the battery goes.

Be careful to avoid cross-threading the End Cap into the Tube. Refer to the Battery instructions for more information about charging and installing a battery.

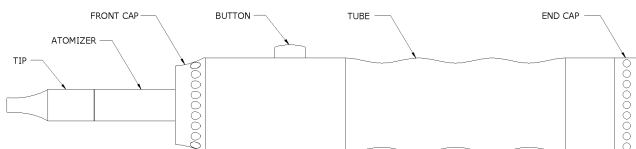

An electronic cigarette, otherwise known as a personal vaporizer, is a battery-powered device that provides inhaled doses of nicotine by way of a vaporized solution. In addition to the nicotine delivery, this vapor also provides a flavor and physical sensation similar to that of inhaled tobacco smoke.

Vaporizers do not contain harmful smoke or tar and have just a few ingredients compared to several thousand found in traditional cigarettes. There is no tobacco, smoke, or combustion involved in its operation. There is no ash, no smell and no second hand smoke.

Vaping is the 21st Century alternative to smoking tobacco products. Just please keep in mind that electronic cigarettes are not meant to be a smoking cessation device.

Provape-1 Features:

- Exclusive reliable and safe electronic switch designed for long life
- Reverse polarity protection built-in
- 3.7V mod made of stainless steel and aluminum
- We use only the best, no compromise components
- Laser etched logo
- Proudly made in the USA
- Lifetime Warranty: excludes accessories (batteries, atomizers, etc).
- Measures - 3.8" L X .75" Diameter (without atomizer)

Batteries:

Provape strongly recommends the use of PROTECTED cells only.

New Li-ion batteries should fully be charged before use.

Do not mix and match batteries – use only 3.7 volt 14500-type Lithium-Ion batteries.

To Charge a Battery:

Plug the charger unit into an appropriate power supply.

Insert a battery into the charger: make sure you put the battery in the correct direction.

Align the positive (+) end of the battery with the positive (+) mark on the charger.

The LED on the charger will glow red when the batteries are charging.

The LED on the charger will glow green when the batteries are charged.

Do not attempt to charge other types of batteries in the battery charger.

Use only the supplied cables with the battery charger.

The battery charger will auto-switch depending on your local power (AC100-240V, 50/60Hz, DC12-24V). Verify that your power is within these ranges before using the battery charger.

Battery Life:

When a battery begins to run out of power, you will notice an appreciable difference in the performance of your Provape-1.

If the unit is loaded with fluid and you aren't getting good vapor, you probably have a weak battery. Exchange it for a freshly charged one.

Notes:


- Replace or refill the cartridge if smoke volume decreases.
- Don't abuse your Provape-1 - even though it's made of metal you can damage it by dropping it.
- Only have your Provape-1 repaired by Provape. Do not attempt to repair the unit yourself as damage or personal injury can occur.
- Do not remove the black plastic housing from behind the Front Cap. Doing so will void your warranty.
- Remove the battery from the e-cigarette if you plan to store it for long periods of time.

Warnings:

- Keep your e-cigarette away from sources of excessive heat.
- Keep this device and all nicotine-related products out of reach of children.
- Don't eat the nicotine fluid. Wipe excess fluid off of the tip to avoid the bitter taste.
- Keep the batteries in a separate place and don't let them mix with metal objects.
- The battery charger is for indoor use only. Don't let it get wet.
- Unplug the battery charger when cleaning it.
- If a battery deforms, begins leaking or smells funny, dispose of it. Wash your hands after handling a leaky battery. Do not get the battery fluid in your eyes! If you do, seek medical attention immediately.

Inserting a Battery:

Unscrew the End Cap and slide the battery, positive (+) end towards the front of the unit, into the Tube. Replace the End Cap and take care not to over-tighten.

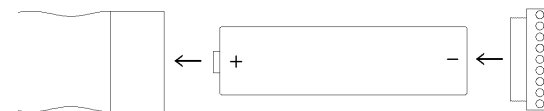

When assembling the unit, take care not to over-tighten the threaded parts. They should be snug, but not so tight you won't be able to unscrew them when you need to.

Questions? Problems?

If you have any questions about or problems with your Provape-1, please contact us at: Info@ProVape.com

Please visit our website at:

www.provape.com

Copyright 2011, Provape Inc.